


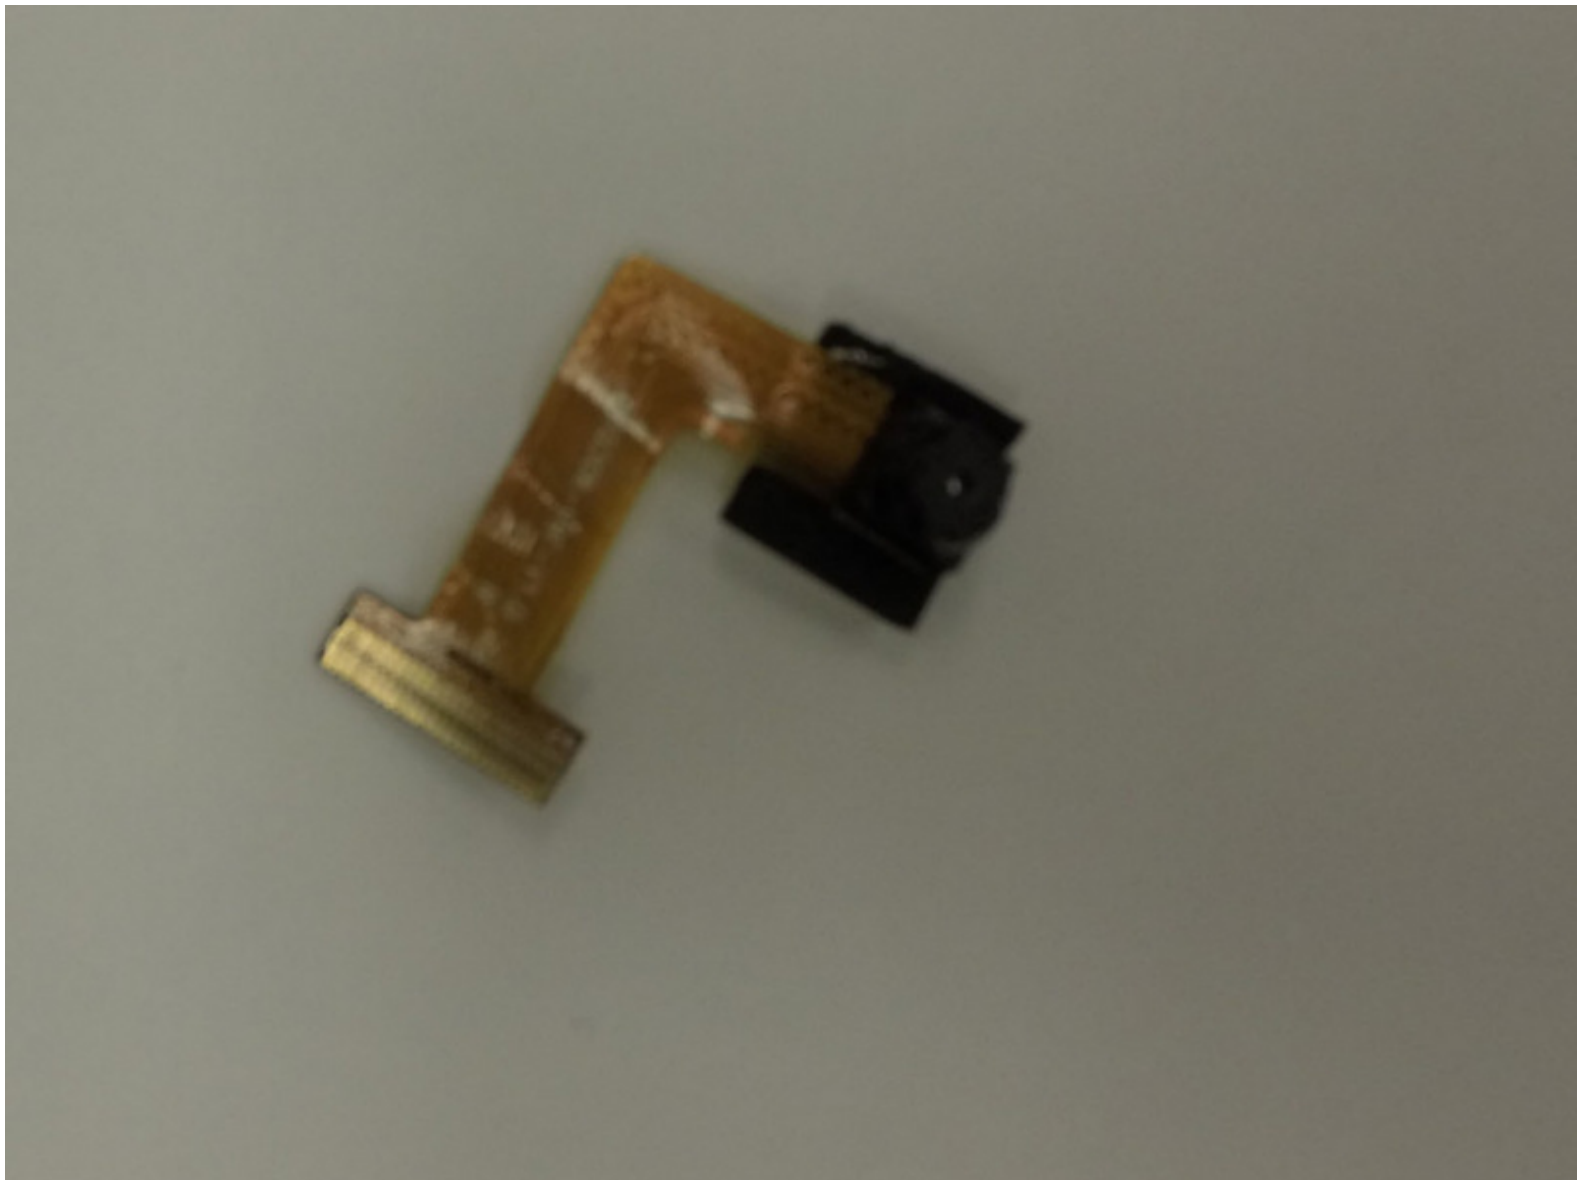

Hipstreet Equinox 2 Camera Replacement

Follow this guide to replace the camera in your tablet.

Written By: Brandon Snodgrass



INTRODUCTION

The camera could be broken from a fall or maybe when your screen cracked the camera was damaged as well. This guide will show the steps to easily replace the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Hipstreet Equinox 2 Camera](#) (1)
-

Step 1 — Rear Case




- Remove these two 3mm screws using a PH00 Screwdriver

Step 2




- Use the blue plastic opening tool to gently pry the back case off

Step 3 — Camera

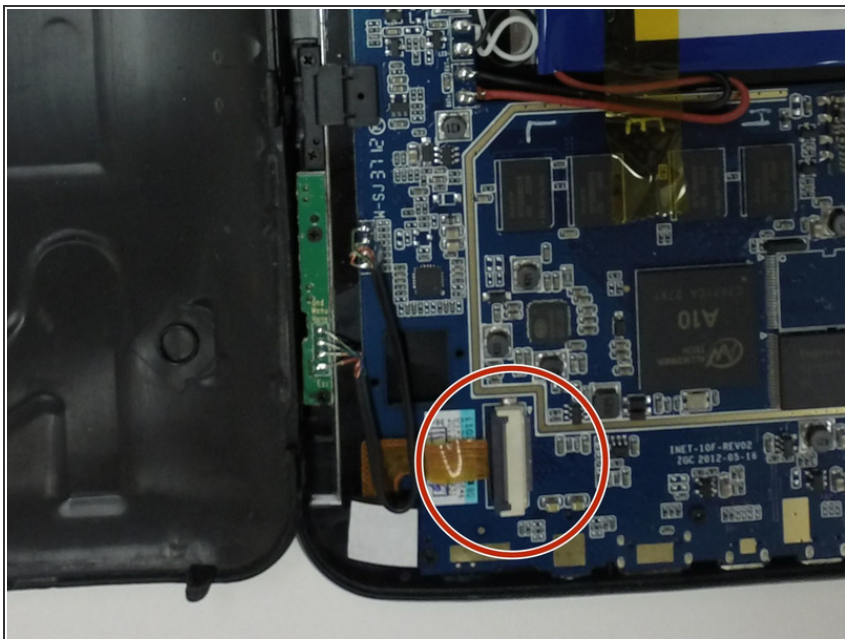

- Lift the tab on the wire ribbon shown here

Step 4

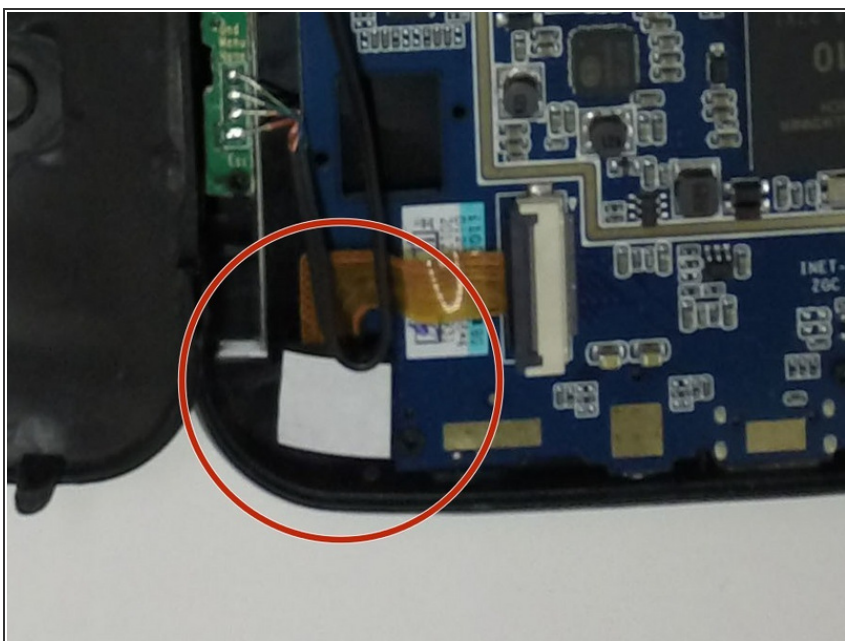

- Pull up gently on the camera housing shown on this picture, it is glued in place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 08:53:44 AM.